



## Focal Manual Wall Screen

Manual spring retraction for wall or ceiling mounting



### DESCRIPTION

Wall screens are ideal for meeting spaces and training facilities to share visual content and work in a collaborative way. The screen can be used occasionally and therefore retracted after use to let the wall free. The housing design of this model allows the product to be mounted on the wall or ceiling. This versatility lets the product be installed in spaces where the walls are already covered by cupboards or other elements. The matt white surface provides a great viewing experience.



SPRING  
RETRACTION



WALL OR CEILING  
MOUNTING



NO GLARE  
SURFACE

## Focal Manual Wall Screen

Manual spring retraction for wall or ceiling mounting

### PRODUCT SPECIFICATIONS

Reference	9D006029	9D006030	9D006004	9D006003	9D006011
Size	1250x1250 mm	1500x1500 mm	1800x1800 mm	2000x2000 mm	2400x2400 mm
Viewing Angle	120°				
Format	1:1				
Black Borders	Yes				
Black Rear	Yes				
Lift Mechanism	Manual				
Mounting	Wall and ceiling				
Carrying Bag	Not included				



### SCREEN SIZE

Measures	A	B	C
9D006029	1200 mm	1200 mm	1380 mm
9D006030	1450 mm	1450 mm	1630 mm
9D006004	1750 mm	1750 mm	1930 mm
9D006003	1920 mm	1920 mm	2130 mm
9D006011	2360 mm	2360 mm	2530 mm

#### Select Screen Size

Screen size depends on the projection room and seating arrangement. Ideally, the following criteria are considered:

- The screen width (L) should amount to at least half the distance between screen and first row of seating (M) (example: With 4 meters between the first row and screen, the minimum screen width is 2 meters).
- The distance between the screen and the last row of seating (N) should not be larger than 6 times the screen width (L) (example: With a screen width of 2 meters, the last row should be at 12 meters as a maximum).
- The distance between the floor and bottom edge of screen (K) is 90 cm, preferably 125 cm for row seating.

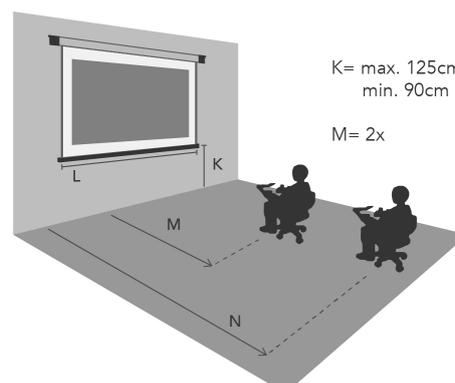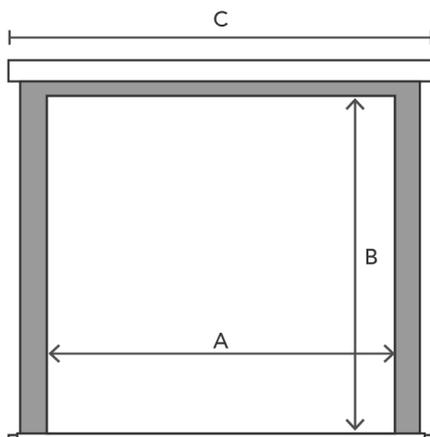

## Focal Manual Wall Screen

Manual spring retraction for wall or ceiling mounting

### CLEANING AND MAINTENANCE

#### Cleaning and Maintenance

Frequent use of a screen requires appropriate care. All screens can be cleaned with carefully applied weak soapsuds. When not in use, the screens should be retracted to their casing to protect them against depositing dust. Avoid touching the screen fabric with bare hands since, in the course of time, dust will stick better to the (greasy) imprints than on clean spots.

Cleaning in 5 easy steps:

Step 1: Use a new dry microfiber cloth and gently wipe the screen. Do not scrub!

Step 2: Make a mixture of 95% warm water and 5% dish soap.

Step 3: Moisten the microfiber cloth without soaking it.

Step 4: Gently clean the screen using the wet microfiber cloth. Apply light pressure and rub the screen side to side.

Step 5: When it is clean, use a dry cloth or towel on the surface to absorb any remaining moisture.

### OTHER IMAGES

