

## Crisplay Motorised Wall Screen

Motor-driven wall screen with remote control



### DESCRIPTION

Motorised wall screens were designed to share visual content and work in a collaborative way. They are ideal for meeting spaces and training facilities. The electric and remote-controlled retraction allows the screen to be used occasionally and easily rolled up after use to let the wall free. The housing design of this model accepts both wall and ceiling mounting. This versatility lets the product be installed in spaces with adorned walls, cupboards or other elements. The matt white surface provides an optimal viewing experience.



INTEGRATED  
MOTOR



REMOTE  
CONTROL



WALL OR CEILING  
MOUNTING



NO GLARE  
SURFACE

## Crisplay Motorised Wall Screen

Motor-driven wall screen with remote control

### PRODUCT SPECIFICATIONS

Reference	SC87670	SC87671	SC87672	SC87673	SC87674	SC87690	SC87691
Size (cm)	160x160 cm	180x180 cm	200x200 cm	240x240 cm	300x300 cm	160x129 cm	180x144 cm
Viewing Angle	120°						
Format	1:1	1:1	1:1	1:1	1:1	4:3	4:3
Black Borders	Yes						
Black Rear	Yes						
Fabric Weight/m <sup>2</sup>	300 g						
Fabric Thickness	0,35 mm						
Lift Mechanism	Motorised						
Motor Cable	Left						
Mounting	Wall and Ceiling						
Motor Certification	CE						
Remote SC86801	Yes						
Carrying Bag	Not included						
Weight	9 Kg	11 Kg	13 Kg	15 Kg	15 Kg	9 Kg	10 Kg

Reference	SC87692	SC87693	SC87694	SC87751	SC87752	SC87753	SC87754
Size	200x159 cm	240x189 cm	300x233 cm	180x141 cm	200x154 cm	240x188 cm	300x226 cm
Viewing Angle	120°						
Format	4:3	4:3	4:3	16:10	16:10	16:10	16:10
Black Borders	Yes						
Black Rear	Yes						
Fabric Weight/m <sup>2</sup>	300 g						
Fabric Thickness	0,35 mm						
Lift Mechanism	Motorised						
Motor Cable	Left						
Mounting	Wall and Ceiling						
Motor Certification	CE						
Remote SC86801	Yes						
Carrying Bag	Not included						
Weight	13 Kg	15 Kg	24 Kg	10 Kg	13 Kg	15 Kg	24 Kg

## Crisplay Motorised Wall Screen

Motor-driven wall screen with remote control



### SCREEN SIZE

Measures	A	B	C	D	R1	R2	R3	E	F	G	J
SC87670	160 cm	160 cm	156 cm	156 cm	2 cm	2 cm	2 cm	187 cm	8.9 cm	8.9 cm	165 cm
SC87671	180 cm	180 cm	176 cm	176 cm	2 cm	2 cm	2 cm	207 cm	8.9 cm	8.9 cm	185 cm
SC87672	200 cm	200 cm	196 cm	196 cm	2 cm	2 cm	2 cm	227 cm	8.9 cm	8.9 cm	205 cm
SC87673	240 cm	240 cm	236 cm	236 cm	2 cm	2 cm	2 cm	267 cm	8.9 cm	8.9 cm	245 cm
SC87674	244 cm	244 cm	236 cm	236 cm	2 cm	2 cm	2 cm	267 cm	8.9 cm	8.9 cm	245 cm
SC87690	160 cm	129 cm	156 cm	117 cm	2 cm	10 cm	2 cm	187 cm	8.9 cm	8.9 cm	165 cm
SC87691	180 cm	144 cm	176 cm	132 cm	2 cm	10 cm	2 cm	207 cm	8.9 cm	8.9 cm	185 cm
SC87692	200 cm	159 cm	196 cm	147 cm	2 cm	10 cm	2 cm	227 cm	8.9 cm	8.9 cm	205 cm
SC87693	240 cm	189 cm	236 cm	177 cm	2 cm	10 cm	2 cm	267 cm	8.9 cm	8.9 cm	245 cm
SC87694	300 cm	233 cm	292 cm	219 cm	4 cm	10 cm	4 cm	327 cm	8.9 cm	8.9 cm	305 cm
SC87751	180 cm	141 cm	174 cm	108 cm	3 cm	30 cm	3 cm	207 cm	8.9 cm	8.9 cm	185 cm
SC87752	200 cm	154 cm	194 cm	121 cm	3 cm	30 cm	3 cm	227 cm	8.9 cm	8.9 cm	205 cm
SC87753	240 cm	189 cm	230 cm	143 cm	5 cm	40 cm	5 cm	267 cm	8.9 cm	8.9 cm	245 cm
SC87754	300 cm	226 cm	290 cm	181 cm	5 cm	40 cm	5 cm	327 cm	8.9 cm	8.9 cm	304 cm

### Select Screen Size

Screen size depends on the projection room and seating arrangement. Ideally, the following criteria are considered:

- The screen width (L) should amount to at least half the distance between screen and first row of seating (M) (example: With 4 meters between the first row and screen, the minimum screen width is 2 meters).
- The distance between the screen and the last row of seating (N) should not be larger than 6 times the screen width (L) (example: With a screen width of 2 meters, the last row should be at 12 meters as a maximum).
- The distance between the floor and bottom edge of screen (K) is 90 cm, preferably 125 cm for row seating.

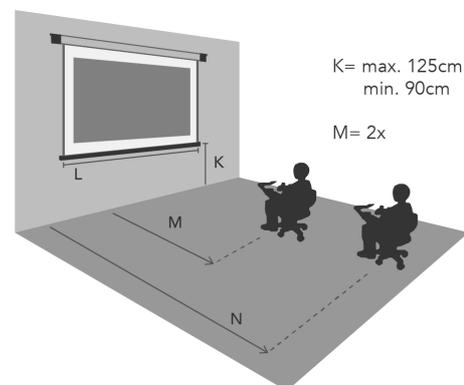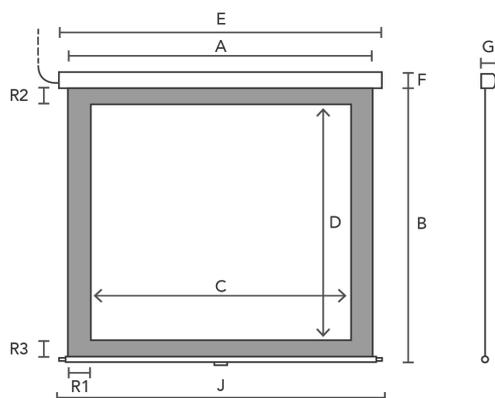

## Crisplay Manual Wall Screen

Motor-driven wall screen with remote control

### CLEANING AND MAINTENANCE

#### Cleaning and Maintenance

Frequent use of a screen requires appropriate care. All screens can be cleaned with carefully applied weak soapsuds. When not in use, the screens should be retracted to their casing to protect them against depositing dust. Avoid touching the screen fabric with bare hands since, in the course of time, dust will stick better to the (greasy) imprints than on clean spots.

Cleaning in 5 easy steps:

Step 1: Use a new dry microfiber cloth and gently wipe the screen. Do not scrub!

Step 2: Make a mixture of 95% warm water and 5% dish soap.

Step 3: Moisten the microfiber cloth without soaking it.

Step 4: Gently clean the screen using the wet microfiber cloth. Apply light pressure and rub the screen side to side.

Step 5: When it is clean, use a dry cloth or towel on the surface to absorb any remaining moisture.

### OTHER IMAGES

